

CUBISCAN 75 RENTAL RETURN INSTRUCTIONS

BOXING UP THE UNIT

Head box

- Place the foam into the head box (39 x 19 x 24)
- Place the spine support in the foam followed by the head, then place the foam cover over the head (image 1)
- If there was a clear cover provided, place that over the unit to protect it during shipping (image 2)
- Add the components sleeve to the top box with the accessories and then tape the box close (images 3 & 4)
 - Power cord
 - Open-end wrench 3/8"
 - USB to serial cable
 - Communication cable
 - White 12 x 12 x 12 calibration cube



Image 4

Base box

- Place the base plate in the foam and tap the base box (34 x 23 x 10) closed (image 5)

Image 1



Image 2



Image 3

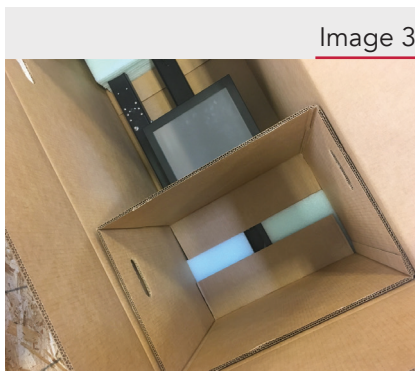


Image 5

