

Cubiscan 225-HS



Operations and technical manual

Version [1.1]

Quantronix, Inc.

Cubing and weighing systems

955 W White Drive

Ogden, Utah 84404

U. S. A.

Phone: 801.451.7000

Website: <http://www.cubiscan.com>



Cubiscan 225-HS operations and technical manual

Cubiscan® and the Quantronix logo are registered trademarks of Quantronix, Inc.

Scanning New Dimensions™, Qbit™, QbitWINT™, and The FreightWeigh System™ are trademarks of Quantronix, Inc.

Windows® is a registered trademark of Microsoft Corporation.

Cubiscan® software and firmware are protected by international and domestic copyrights.

Cubiscan® 150 measurement products are protected by one or more of U.S. Patents Re42,430 and D490,328 and foreign patents.

Cubiscan® 110 measurement products are protected by one or more of U.S. Patent Re42,430 and foreign patents.

Cubiscan® 125 measurement products are the subject of U.S. Patent 8,928,896. Another U.S. patent is pending.

Cubiscan® 225 measurement products are protected by one or more U.S. patents, refer to U.S. Patent 9435637.


This document and website Copyright© 2018 by Quantronix, Inc. All rights reserved.



CAUTION

The Cubiscan 225-HS should only be serviced by qualified personnel.

Observe precautions for handling electrostatic sensitive devices when setting up or operating the Cubiscan 225-HS.

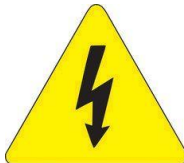

WARNING

Disconnect all power to the Cubiscan 225-HS before servicing or making any connections.



LIMITED WARRANTY

QUANTRONIX NEW PRODUCT

Statement of Warranty. Quantronix, Inc.'s, warranty obligations are limited to the terms set forth below: Quantronix (hereinafter referred to as the "Seller") warrants that its new product is in accordance with Seller's published specifications (or those agreed upon with Buyer in writing) at the time of sale or lease and that it is free from non-cosmetic defects in materials and workmanship under normal use for a period of one (1) year from the date of sale or the commencement date under a written equipment lease or rental agreement (the "Warranty Period"). If a hardware defect arises and a valid claim is received within the Warranty Period, at its option, Seller will either (i) repair the hardware defect at no charge, using new or refurbished replacement parts, or (ii) exchange the product or defective part(s) with a product or part(s) that are new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product or part, or (iii) refund the purchase price of the product after Buyer has returned the product to Seller. For purposes of this warranty agreement, "Buyer" shall mean and refer to (i) the party which originally – whether from Seller directly, or from an authorized distributor, agent or reseller who is authorized by Seller – purchases, or leases under a written equipment lease or rental agreement, the Seller's product which is the subject of this warranty, or (ii) any subsequent purchaser or transferee that acquires valid title to the equipment within the Warranty Period.

In the event of the occurrence of a claim under this warranty, the Buyer shall have thirty (30) days to notify Seller in writing of the nature and specifics of the claimed defect; provided, however, that any and all claims must be received before the expiration of the Warranty Period. Failure to notify Seller within such time period shall void this warranty. Any claim of a warrantied defect is subject to inspection and analysis by Seller, prior to and/or after Buyer ships the product to Seller, to conclusively identify or confirm the nature and cause of failure and application of this warranty. In the event that the defect or damage is excluded from warranty the Seller may at its option either (i) provide Buyer with a quote to make any such repairs or replacements which are not covered under this warranty, or (ii) give Buyer twenty (20) days to pay for return shipping and upon receipt return the product to Buyer. If Buyer fails to pay for return shipping after twenty (20) days' notice and after repairs are made or warranty coverage is determined not applicable, Seller may dispose of or scrap the product.

This is a factory warranty and any defective components, mechanical or electrical, will be repaired or replaced, at the discretion and authorization of Seller, at Seller's facilities in Utah. It shall be the Buyer's responsibility to return the faulty equipment or components to Seller at Buyer's expense as well as pay for all return shipping. This warranty does not include the cost, reasonable expenses to

travel, and labor at Buyers or others facility. All replaced or exchanged parts becomes property of Seller. Buyer shall first receive written confirmation to ship the product before sending it. Written confirmation to ship is not a guarantee that the defect or damage to the product is covered by this warranty. Seller is not obligated to pay for labor, material, reasonable travel expenses, or service charges involved in the removal, return, or installation of equipment or components. Seller reserves the right to incorporate improvements in material and design of its products without notice and is not obligated to incorporate the same improvements in equipment previously manufactured.

Exclusions and Limitations. This limited one (1) year warranty is applicable exclusively to original equipment products and components that were manufactured by Seller. Seller also warrants its replacement parts, subject to the terms and conditions set forth herein, for the lesser period of ninety (90) days from the date of delivery or until the expiration of the original warranty, whichever is greater. Seller does not warrant, for any purpose, any external accessories, or integrated parts, including but not limited to computers, controllers and/or barcode scanners, that are manufactured by another manufacturer and sold under a separate label, even if they are packaged or sold with Seller's product. Seller's obligation and liability under this warranty is expressly limited to repair or replacement (at its option) of the warranted equipment or components within the Warranty Period. A purchase by Buyer of equipment that it had first leased or rented shall not start a new Warranty Period. Seller does not warrant that the operation of the product will be uninterrupted or error-free.

This warranty shall not apply to equipment or components which has/have:

1. Been the subject of an accident, or repairs or modifications attempted or made and not authorized by Seller.
2. Been used with incompatible products.
3. Been operated under abnormal conditions, excessive heat or cold, highly corrosive environments, or in an unintended manner.
4. Not been operated or maintained in accordance with Seller's instructions.
5. Been subject to misuse or abuse, negligent handling, improper installation, accident, damage by fire, flood, snow, ice, water or other liquid damage, lightning, abnormal electrical condition and/or power surge, earthquake, or other act of God or events outside of Sellers control.
6. Had serial numbers altered, defaced or removed.
7. Been operated beyond capacity.
8. Not been manufactured by Seller including parts, accessories, or components which have been integrated into, used alongside of, or in conjunction with a product manufactured by Seller.

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, STATUTORY, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT ALLOWED BY LAW, SELLER SPECIFICALLY DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF SELLER CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY AND TO REPAIR OR REPLACEMENT SERVICE AS DETERMINED BY SELLER IN ITS SOLE DISCRETION. This statement sets forth the full extent of Seller's liability for breach of any warranty or deficiency in connection with the sale or use of the product. No employee, representative or reseller of Seller is authorized to change this warranty in any way or grant any other warranty.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE EXTENT PERMITTED BY LAW, SELLER IS NOT RESPONSIBLE FOR DIRECT, INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE; LOSS OF REVENUE; LOSS OF ACTUAL OR ANTICIPATED PROFITS (INCLUDING LOSS OF PROFITS ON CONTRACTS); LOSS OF THE USE OF MONEY; LOSS OF ANTICIPATED SAVINGS; LOSS OF BUSINESS; LOSS OF OPPORTUNITY; LOSS OF GOODWILL; LOSS OF REPUTATION; LOSS OF, DAMAGE TO OR CORRUPTION OF DATA; OR ANY INDIRECT OR CONSEQUENTIAL LOSS OR DAMAGE HOWSOEVER CAUSED INCLUDING THE REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, PROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED OR USED WITH SELLER PRODUCTS. BUYER WAIVES THE RIGHT TO SEEK TOTAL COMBINED DAMAGES FROM SELLER IN EXCESS TO THAT WHICH WAS PAID TO SELLER AND SELLER SHALL BE LIMITED FROM ANY AND ALL CLAIMS RELATED TO THIS WARRANTY TO BE NO MORE THAN WHAT WAS PAID TO SELLER FOR THE NEW PRODUCT.

CONSUMER PROTECTION LAWS. FOR CONSUMERS WHO ARE COVERED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE OR, IF DIFFERENT, THEIR COUNTRY OF RESIDENCE, THE BENEFITS CONFERRED BY THIS WARRANTY ARE IN ADDITION TO ALL RIGHTS AND REMEDIES CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS. Some countries, states and provinces do not allow the exclusion or limitation of

incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by country, state or province.

Manual updated 2026-05-27

Table of Contents

Chapter 1	Product Description	1
	Specifications	2
Chapter 2	Getting Started	5
	Operating environment	5
	Components of the Cubiscan 225-HS	5
	Turning the Cubiscan 225-HS on/off	6
	Connecting to a computer (optional)	7
	Connecting to a computer via Ethernet to USB adapter	8
	Connecting to a computer via USB	11
	Connecting to a computer via Serial (RS-232-C)	12
	Installing Qbit (Optional)	12
	Moving the touchscreen	13
Chapter 3	Operation	14
	Cubiscan 225-HS touchscreen	14
	Indicator light	15
	Touchscreen care	16
	Dimensioning	16
	Dimensioning using Qbit	17
	Dimensioning using the touchscreen	17
	Measuring items	18
	Special Features	20
	Emergency stops	21
Chapter 4	Configuration	22
	About menu	22
	System configuration	23
	Operation	24
	Units	28
	Ethernet	30
	Other	30
	Special Features	30

	Filter	30
	Smallest box	31
	Tray	33
Chapter 5	Calibration	34
	Gate calibration	34
	Touchscreen calibration	36
Chapter 6	Maintenance	38
	Belt tension	38
	Cleaning the sensors	39
	Cleaning the sensor guard	40
Chapter 7	Troubleshooting	41
	No response when you turn power on	41
	Dimension readings are not accurate	41
	Computer error messages	42
	Diagnostics	42
	Scale	43
	Gate	44
	Touchscreen	46
	Encoder	46
Appendix A	Parts List	47

List of Figures

Figure 1	Cubiscan 225-HS	2
Figure 2	Overall drawing	6
Figure 3	On/off switch	7
Figure 4	Drawing showing ports	8
Figure 5	Installation bubble	9
Figure 6	Device installed bubble	9
Figure 7	Installation process bubble	9
Figure 8	Adapter is ready to use	10
Figure 9	Status window	10
Figure 10	General Properties Window	11
Figure 11	Placement Options	13
Figure 12	Cubiscan 225-HS home screen	14
Figure 13	Home screen	17
Figure 14	Measurement display	18
Figure 15	Irregular item measurement results	19
Figure 16	Box measurement results	19
Figure 17	Pinch points	20
Figure 18	Emergency stops	21
Figure 19	About alibi menu	23
Figure 20	Configure operation menu	24
Figure 21	Configure Units menu	28
Figure 22	Configure Ethernet menu	29
Figure 23	Configure Other menu	30
Figure 24	Filter mode	31
Figure 25	Smallest box mode on	32
Figure 26	Smallest box mode off	32
Figure 27	Gate calibration	35
Figure 28	Calibrate Length	36
Figure 29	Calibration menu	37
Figure 30	Touchscreen calibration	37
Figure 31	Cover guards	38
Figure 32	Tension measurement	39
Figure 33	Scale diagnostics screen	43
Figure 34	Diagnose gate screen 1 of 3	44

Figure 35	Diagnose gate screen 2 of 3	44
Figure 36	Diagnose gate screen 3 of 3	45
Figure 37	Diagnose touchscreen screen	46
Figure 38	Diagnose encoder screen	46

CHAPTER 1

PRODUCT DESCRIPTION

The Cubiscan 225-HS can be used as a stand-alone unit, or it can be installed in an “in-line” configuration with auxiliary conveyors.

This system is a precision, in-line dimensioning system that is integrated into a conveyor—allowing objects to be measured quickly and accurately. The Cubiscan 225-HS is capable of measuring boxes and irregularly-shaped objects with high precision.

The Cubiscan 225-HS provides the solution to on-demand box making and results in higher degrees of accuracy, reduced packaging and shipping costs, and economized use of storage.

The standard measurement capacity is 24 x 24 x 60 inches (60 x 60 x 150 cm) with a resolution of 0.05 inches (1.0 mm) while requiring an interval of only 6 inches (15 cm) between objects. The integrated belt conveyor has a variable speed of 50 to 100 ft (15 to 30.5 m) per minute. This system includes a built-in touchscreen interface but can also be connected and operated by PC. An optional laptop tray can be attached directly to the Cubiscan 225-HS. Cubiscan software, Qbit, can be used with the Cubiscan 225-HS to create menu-driven operator controls, data storage, transfer, and diagnostics. The Cubiscan 225-HS comes ready to fit your dimensioning needs.



FIGURE 1
Cubiscan 225-HS

Specifications

Power Requirements

110 to 240 VAC single-phase, 50 to 60 Hz

Environmental

Operating Temperature: 32° to 104° F (0° to 40° C)

Humidity: 0 to 90% non-condensing

Measuring Sensor

Infrared light beam

Measuring Capacities

Measurement Range

Length: 6.00 to 60.00 in (15.0 to 150.0 cm)
Accuracy +/- 0.25 in (0.6 cm)

6.00 to 96.00* in (15.0 to 240.0 cm)
Accuracy +/- 0.50 in (1.0 cm)

Width: 0.50 to 24.00 in (1.0 to 60.0 cm)
Accuracy +/- 0.10 in (0.2 cm)

Height: 0.20 to 24.00 in (0.5 to 60.0 cm)
Accuracy +/- 0.10 in (0.2 cm)

* For length of 96", additional conveyer is required.

Weight Limit: 50 lb (23 kg)

Measurement Increment: 0.05 in (0.1 cm)

Belt Speed: 50 to 100 ft (15 to 30.5 m) per minute

Minimum Interval Between Objects: 6.00 in (15.0 cm)

Object Colors: Opaque

Physical

Length: 102 in (259 cm)

Width: 35 in (90 cm)

Height: 61 to 69 in (154 to 175 cm) (Adjustable legs)

Weight: 665 lb (301 kg)

User Interface

Cubiscan's Qbit™ software can be used to interface with the Cubiscan 225-HS.

Display:

Integrated TFT LCD Touchscreen (1024 x 768) displays L, W, H, unit of measure, 2D and height profile, diagnostic codes.

Outputs:

Serial (1), Ethernet (1), USB (1)

CHAPTER 2

GETTING STARTED

This chapter provides instructions for getting started with the Cubiscan 225-HS. It describes the operating environment, various components of the Cubiscan 225-HS, and how to connect to a computer (optional).

Operating environment



The Cubiscan 225-HS is designed to be operated in a warehouse environment; however, for proper operation the following conditions should be met if possible.

- Do not subject the Cubiscan 225-HS to extremes in temperature or humidity. Locate the Cubiscan 225-HS inside, as far from open freight doors as possible.
- Protect the Cubiscan 225-HS from static electricity, especially the touchscreen.
- Orient the Cubiscan 225-HS so the touchscreen faces the operator.
- Place the Cubiscan 225-HS on a level floor. The Cubiscan 225-HS must be level to operate properly.

Components of the Cubiscan 225-HS



Below is an overall view of the Cubiscan 225-HS and its main components.

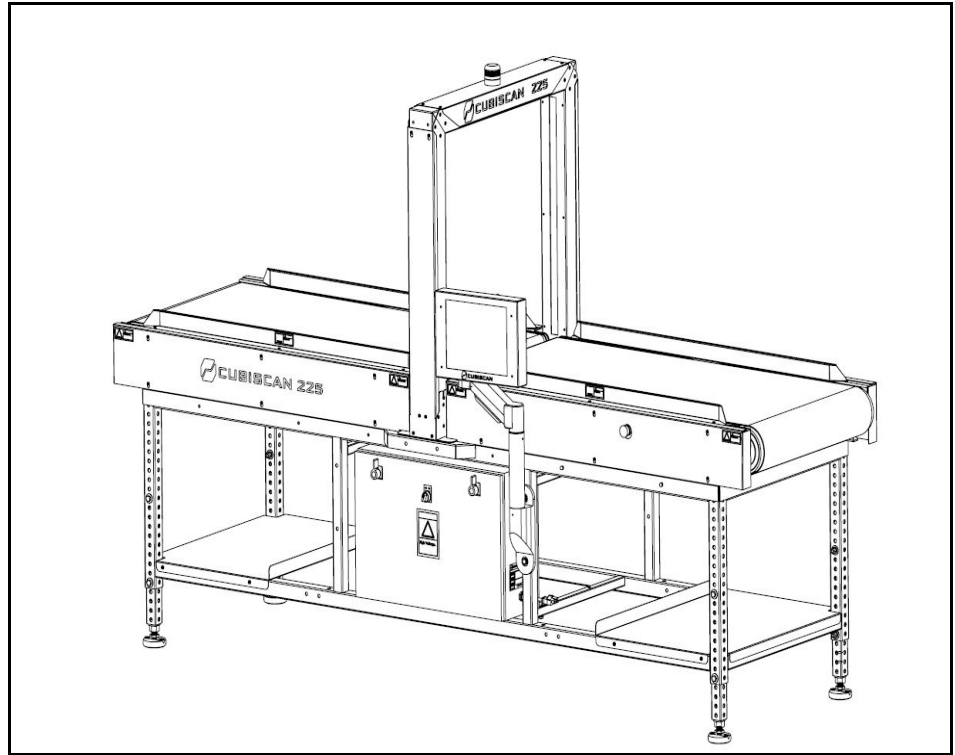


Figure 2
Overall drawing

Turning the Cubiscan 225-HS on/off

To turn the Cubiscan 225-HS on, turn the switch to the on position, shown below.

To turn the Cubiscan 225-HS off, turn the switch to the off position.

If the Cubiscan 225-HS is not turning on when you turn the switch to the **ON** position, you may need to reset the breaker.



Figure 3
On/off switch

Connecting to a computer (optional)

To connect the Cubiscan 225-HS to a computer, do the following.

1. Place the computer close to the Cubiscan 225-HS.
2. Locate your preferred port. See Figure 4.
3. Choose from one of the following operating methods.
 - Connect the Cubiscan 225-HS to a host system via a standard 10/100 Base-T Ethernet TCP/IP port. You can use Qbit software or the touch-screen options to configure the Cubiscan 225-HS for TCP/IP communication. Contact Cubiscan for information on available software. Or, refer to [Appendix A "Parts List"](#) on page 47 for command protocol and setup parameters.
 - Connect the Cubiscan 225-HS to a PC using a USB cable.
 - Connect the Cubiscan 225-HS to a PC through the RS-232-C serial port on the controller box. Use the Qbit software on the computer to run the Cubiscan 225-HS.

- Operate the Cubiscan 225-HS without a computer using the touch-screen. Refer to “Dimensioning using the touchscreen” on page 17 for information.

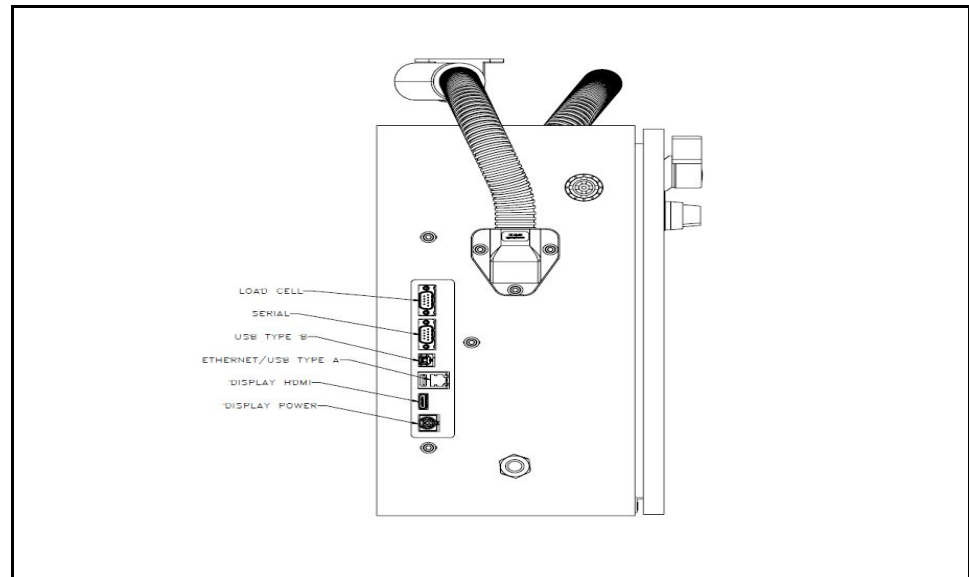


Figure 4
Drawing showing ports

Connecting to a computer via Ethernet to USB adapter

This section describes how to use a TRENDnet Ethernet to USB adapter to connect a computer to the Cubiscan 225-HS.

Use Cubiscan’s Qbit software (refer to the *Qbit User Guide*) or the touchscreen options (see Chapter 4 “Configuration”) to configure the Cubiscan 225-HS for TCP/IP communication, or refer to the separate *Communications Protocol* document for information on the TCP/IP command protocol and setup parameters. Contact Cubiscan if you need additional assistance.

If you are using the Ethernet to USB connection option:

1. Install the driver that is needed, for further information on installing the driver, see below.
2. Connect the Ethernet cable to the Cubiscan 225-HS’s Ethernet port, as shown in Figure 4.
3. Attach the Ethernet cable to the TRENDnet USB to Ethernet cable adapter (supplied).
4. Connect the TRENDnet cable adapter to the PC.

NOTE

The following screen images were taken from a Windows 7 operating system. Your screen images may appear different if you are using a different operating system.

Installing and configuring the Ethernet driver

To install the Ethernet driver there are two options.

1. You can install the driver using the TRENDnet CD-ROM and User's Guide.

Or you can complete the following steps:

1. Plug the white TRENDnet USB to Ethernet adapter into the computer. The following bubble will appear in the bottom right corner of the screen.




Figure 5
Installation bubble

- You can wait a few moments for the installation process to finish and the following bubble will pop up.




Figure 6
Device installed bubble

- If you clicked on the installation bubble, the following window will open.

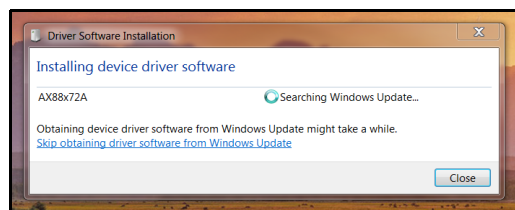


Figure 7
Installation process bubble

- Once the driver has finished the installation process it will report that the adapter is ready to use.

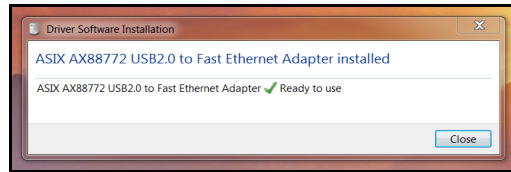


Figure 8
Adapter is ready to use

Access Ethernet network settings

Once the driver is installed you should set the static IP address and the Subnet mask. You can access these network settings by completing the following steps:

1. Under Control Panel > Network and Internet > Network and Sharing Center locate and click on the correct connection to bring up the status window.

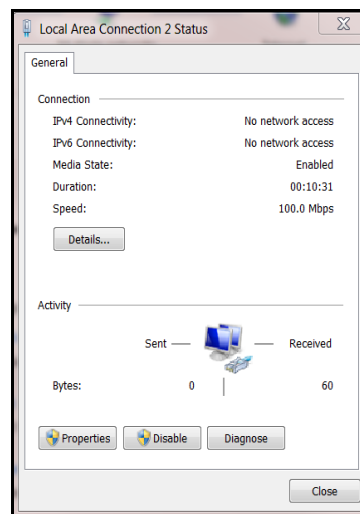


Figure 9
Status window

2. Select **[Properties]**. Double-click Internet Protocol Version 4 to bring up the general properties window.

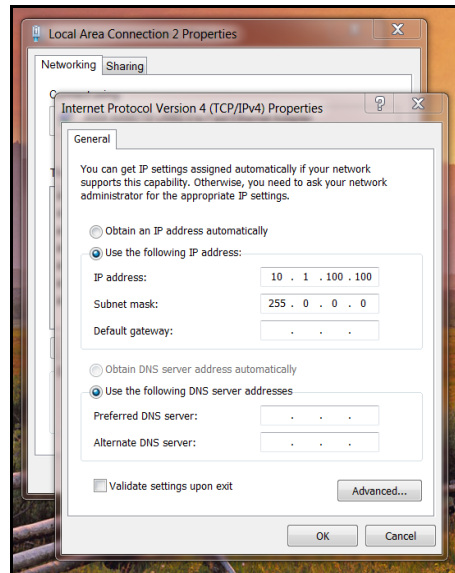


Figure 10
General Properties Window

From this screen you can set the IP address and Subnet mask. The recommended IP address setting is 10.1.100.10. The recommended Subnet mask setting is 255.255.255.0.

3. Click **[OK]** to exit when you are finished. Close any other remaining windows.

Once you have completed this setup process, the computer will communicate with the Cubiscan 225-HS.

Connecting to a computer via USB

This section describes how to use a USB connection to connect a computer to the Cubiscan 225-HS. This method is not recommended for the Cubiscan 225-HS.

If you are using the USB cable (not supplied) connection:

1. Connect the USB cable to the Cubiscan 225-HS's USB port located on the controller box, as shown in Figure 4.
2. Connect the USB cable to the PC.

Connecting to a computer via Serial (RS-232-C)

If you are using the RS-232 serial communications cable (not supplied), complete the following steps:

1. Route the RS-232 serial communications cable so it cannot be crushed, bent, or pulled loose. Make sure that the cable does not interfere with the scale.
2. Connect the serial cable to the Cubiscan 225-HS's serial port, as shown in Figure 4.
3. Locate a free RS-232-C serial port on your computer. Refer to your computer's documentation, if necessary, to identify the ports. If the serial port is 9-pin, connect the serial cable directly to the serial port. If it is 25-pin, use a 25-pin to 9-pin adapter (not supplied).

To secure the RS-232 serial cable, tighten both screws at each end of the cable. It is important that the cable be secure.

Installing Qbit (Optional)



A flash drive is available containing the Qbit software program, which can be used to operate the Cubiscan 225-HS.

The *Qbit User Guide*, located on the flash drive, provides instructions for installing and using Qbit. You can also download the user guide from the Cubiscan web site at www.cubiscan.com.

Moving the touchscreen



The swiveling touchscreen can be mounted adjacent to either side of the gate, depending on your configuration needs. The placement options are shown below.

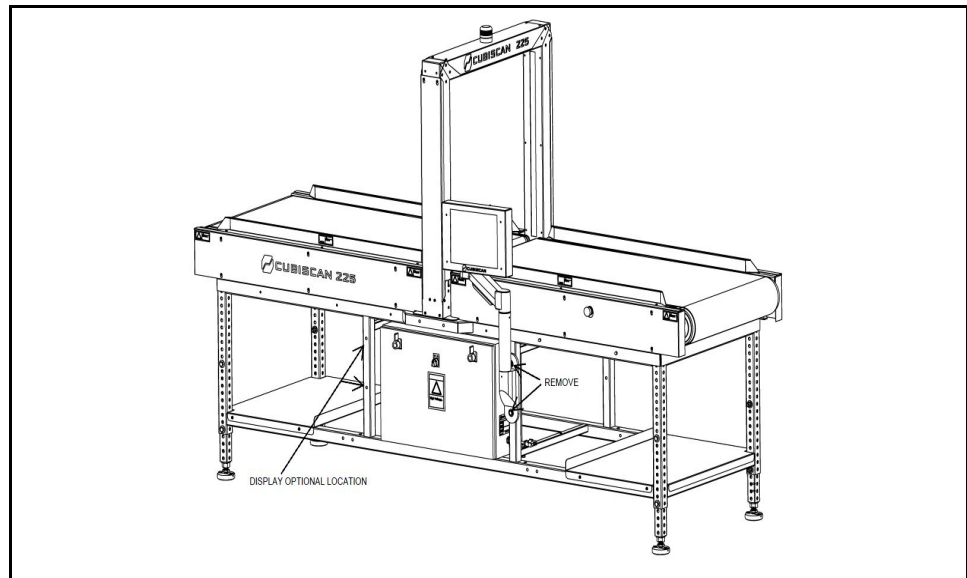


Figure 11
Placement Options

To move the touchscreen, complete the following steps.

1. Power off the Cubiscan 225-HS.
2. Disconnect the cord from the touchscreen.
3. Lift the touchscreen stand out of the touchscreen holder and place it in a safe location.
4. Use a 3/16" Allen wrench to remove the socket head cap screws that are holding the brackets in place.
5. Reattach the touchscreen holder in your preferred location.
6. Place the touchscreen stand into the touchscreen holder.
7. Secure the brackets and screws back into place.
8. Reattach the cable from step 2.

CHAPTER 3

OPERATION

This chapter provides instructions for operating the Cubiscan 225-HS.

Cubiscan 225-HS touchscreen

You can use the touchscreen (shown below) to configure and control the Cubiscan 225-HS as well as display measurement results.

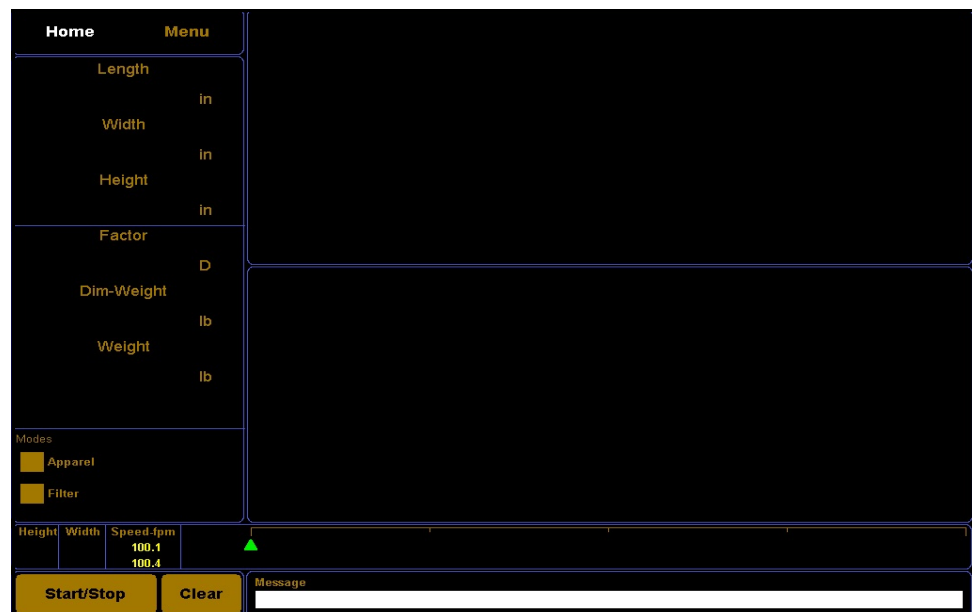


Figure 12
Cubiscan 225-HS home screen

All measurement, setup, and diagnostic information is shown on the touchscreen. You tap touch keys on the display to change the configuration and perform diagnostics.

- Tap a key to select a function.
- Tap **[Menu]** to select configuration or calibration functions.
- Tap **[Start/Stop]** to begin or stop measurement.
- Tap **[Clear]** to clear the screen of previous measurement data.

The home screen displays the XY view (top-down view) on the upper left of the screen. The Z view (side view) is displayed on the lower left of the screen.

The green cursor follows a measurement that is being taken.

Length	These display the measured dimensions in inches (in) or centimeters (cm) as selected. You can also view the height and width of an item near the bottom left of the screen.
Width	
Height	
Factor	This displays the dimensional factor used to determine the dimensional weight of an item.
DimWeight	This displays the dimensional weight of an item based on the dimensional factor.
Weight	This displays the actual weight of an item.
Barcode	You can view an item's barcode here.
Modes	By tapping the box next to [Tray] , you can enable or disable the tray mode. When selected, the Cubiscan 225-HS can measure items that would normally be too small for the gap in the conveyor belts. For more information on this feature, see "Tray" on page 33.
Speed-fpm	The belt speed is displayed here.
Menu	Tap this key to go to the configuration menu to set up, calibrate, or diagnose the Cubiscan 225-HS.

Other touch keys may be used for specific functions and are described in the instructions for that function. Refer to [Chapter 4 "Configuration" on page 22](#) for information on configuration and to ["Diagnostics" on page 42](#) for information on diagnostics.

Indicator light

The indicator light located at the top of the measurement gate displays the Cubiscan 225-HS's current status according to color.

Green	This means that the Cubiscan 225-HS is ready to measure.
Red	This means that the Cubiscan 225-HS has experienced an emergency stop or other failure.
No light	This means that the Cubiscan 225-HS is not ready to measure. There may be an object in the measurement field or there is LED blockage.

Touchscreen care

Never use a sharp or hard-tipped object to tap on the touchscreen. It is glass and can scratch or break. You can tap lightly on the screen with your fingertip, or you can use the eraser end of a pencil or a stylus with a soft point. Use a light touch, just hard enough for the screen to respond.

To clean the touchscreen, moisten a soft cloth with water, then gently wipe the screen clean with the cloth. Do not spray liquid directly on the touchscreen.

Dimensioning



The Cubiscan 225-HS can be used to measure irregularly-shaped objects and boxes (refer to "Specifications" on page 2 for specifications and size limitations).

Weighing	Objects are weighed by a coordinating scale prior to moving on the Cubiscan 225-HS's conveyor belt through the gate. (See page 27).
Measuring	Objects are measured by the infrared light beams on the Cubiscan 225-HS's gate when the object is moved underneath the gate by the conveyor belt.
Dimensional Weight	The Cubiscan 225-HS takes the weight and measurement data, and using a dimensional factor, calculates the dimensional weight of an object. (See "Units" on page 28).
Results	Measurement results will only display when the Cubiscan 225-HS touchscreen is displaying the home screen.

Refer to the appropriate following section for instructions.



Figure 13
Home screen

Dimensioning using Qbit

Refer to the *Qbit User Guide* for instructions on measuring, weighing, and other functions in Qbit. The *Qbit User Guide* is provided on a flash drive, or you can download it from the Cubiscan website at www.cubiscan.com.

Dimensioning using the touchscreen

All controls and displays for the Cubiscan 225-HS are shown on the touchscreen. If a computer is not connected, you can use the touchscreen to measure objects. Measurements cannot be recorded; they are displayed on the touchscreen.

Measurement results will only display when the Cubiscan 225-HS touchscreen is displaying the home screen.



Figure 14
Measurement display



NOTE If you have not already done so, remove the thin protective film that covers the Cubiscan 225-HS touchscreen. Peel it back from one of the corners using your fingernail, and then pull it off.

Measuring items

To measure items, complete the following steps.

1. Make sure that the conveyor belt is free of objects.
2. Turn the Cubiscan 225-HS on.
3. Tap **[Start/Stop]**. The conveyor belt will begin moving.
4. Place an item on the conveyor belt.

After the item passes through the measurement gate, the measurement results will be displayed on the touchscreen.

The measurement results will be displayed until the Cubiscan 225-HS measures another item. Examples of measurement results are shown below.

The Cubiscan 225-HS requires only a 6 inch (15 cm) gap between objects.

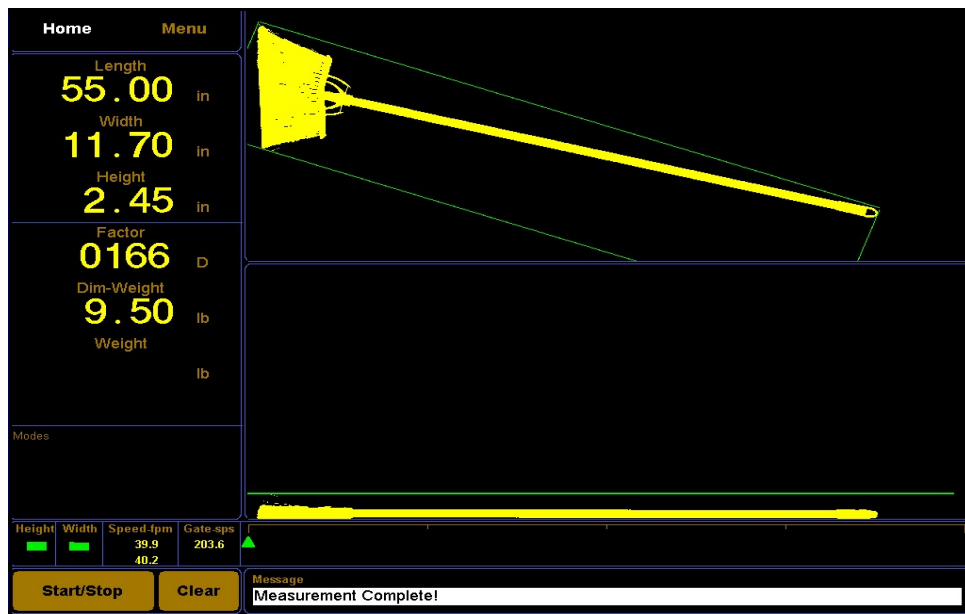


Figure 15
Irregular item measurement results



Figure 16
Box measurement results

When measuring items, be careful of pinch points. Refer to Figure 17 below.

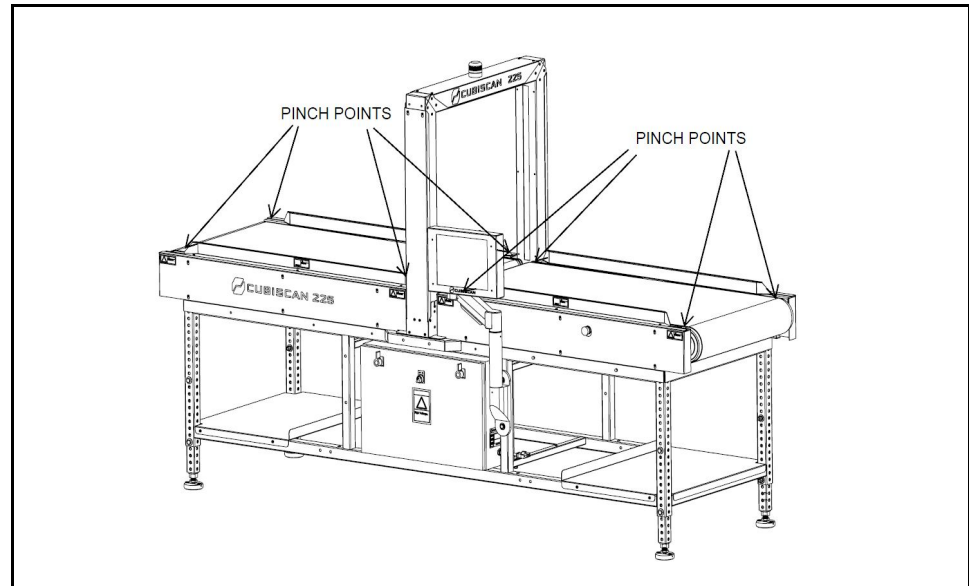


Figure 17
Pinch points

Special Features

You can measure items with an improved variety of available configurations. To learn more about these options, see "Special Features" on page 20.

Emergency stops

The Cubiscan 225-HS has emergency stops located on both sides of the measuring gate, see Figure 18 below. These emergency stops should be used if the Cubiscan 225-HS needs to be stopped immediately.

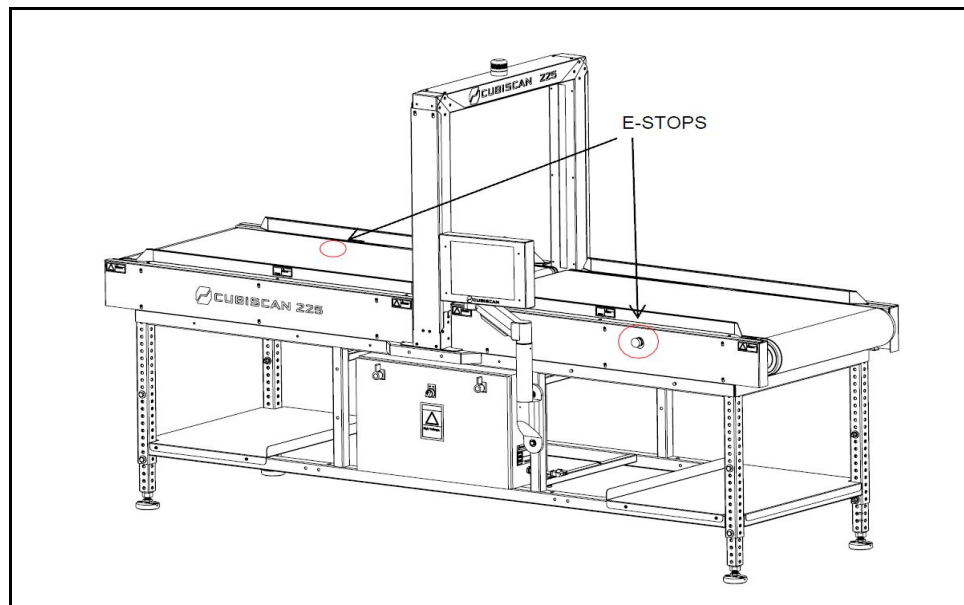


Figure 18
Emergency stops

To activate the emergency stops, press either one of the emergency stop buttons in. This will cause all belt movement to cease.

To resume measuring after an emergency stop, you will need to twist the emergency stop button clockwise until it pops back out to its former position.

CHAPTER 4

CONFIGURATION

This chapter provides instructions for using the Cubiscan 225-HS touchscreen to set up the length, width, and height measurements, as well as special features that the Cubiscan 225-HS offers. This chapter also provides instructions for configuring the units and other settings. For information on calibrating the Cubiscan 225-HS touchscreen, refer to Chapter 5 "Calibration" on page 34.

If you have a computer connected to the Cubiscan 225-HS with Qbit installed, you can use Qbit to set up the measurement units, select the Cubiscan 225-HS communications port, and other functions. Refer to the *Qbit User Guide* for instructions on measuring and other functions in Qbit. The *Qbit User Guide* is provided on the flash drive with the Qbit application, or you can download it from the Cubiscan website at www.cubiscan.com.

About menu



After tapping **[Menu]**, tap **[About]** to view its sub-menus near the bottom of the screen which will allow you to tap and view the following screens.



Figure 19
About alibi menu

- Version** This screen displays information about the machine, its **serial number**, and its firmware.
- Config-Audit** This screen displays the configuration audit trail which keeps records of configuration.
- Cal-Audit** This screen displays the calibration audit trail which keeps records of calibration.
- Alibi** You can enter a package number on this screen to find information about that particular package. (See Figure 19 above).

System configuration

After tapping **[Menu]**, tap **[Configure]** at the top of the screen to view its sub-menus near the bottom of the screen, which will allow you to configure your system.



Figure 20
Configure operation menu

Operation

This screen displays options for using the Cubiscan 225-HS. You can check or un-check boxes or use the drop-down menus to select your preferred options. You can also tap on the numbers to customize them.

This screen is where you can enable the following options:

- | | |
|----------------------------|--|
| Display Dim-Weight | Check this box if you want the dim weight and factor to be displayed on the home screen. |
| Enable Bar code | Bar codes are displayed on the home screen when this box is checked. |
| Enable Printer | When this box is checked, you can print labels containing package information. |
| Enable Smallest Box | Checking this box will enable the Cubiscan 225-HS to display the dimensions of the smallest box in which an item will fit. This is the default mode. (See page 31). |
| Enable Swap Longest | Check this box if you want to enable the Swap Longest feature. This feature will automatically report the longest dimension as the length. |
| Enable Tray Mode | This mode, which requires a tray supplied by Cubiscan, enables the Cubiscan 225-HS to measure very small items that would normally fall into the gap between conveyor belts. (See page 33). |

Enable Auto Stop	When auto stop mode is activated, the Cubiscan 225-HS will automatically stop the conveyor belt after a measurement has been taken.
Enable EOB Message	Checking this box will enable the Cubiscan 225-HS to report a message on the home screen when it detects the end of box as it exits the gate.
Enable Remote Start	When this option is enabled, the Cubiscan 225-HS relies on a programmable logic controller (PLG) to begin measurements. When this option is not checked, the [Start/Stop] button must be used to begin measurements.
Enable Quiet Start	Checking this box turns off the buzzer sound that occurs as a default when measurements begin.
Conveyor Direction L>R	The conveyor is designed to go from right to left. You can change the direction of the conveyor to go left to right by checking this box. On this screen, you can also set the following options. Tap the numbers to customize them.
Password	Enter an optional password. If you set up a password, it must be entered each time you want to access the touchscreen menu.
Comp. Hgt	This field displays the height (85 mm) of the compression plate provided by Cubiscan. If different compression plate is used, you'll need to change the value in this field so that the Cubiscan 225-HS can subtract the height of the compression plate from measurements in which it is used.
Tray Hgt	This field displays the height (8 mm) of the tray provided by Cubiscan. If a different tray is used, you'll need to change the value in this field so that the Cubiscan 225-HS can subtract the height of the tray from measurements in which it is used.
Min Wid	This field allows you to set parameters to exclude width measurements smaller than a value you specify.
Min Len	This field allows you to set parameters to exclude length measurements smaller than a value you specify. This screen is also where you can set these features:
Language	Language options include English, French, Spanish, Japanese, and Chinese.
Protocol	The default protocol is standard, but you may also select 100-L (original) or expanded. The expanded protocol includes the date, time, and bar code.
Img. file	This drop-down menu allows you to select whether or not you want the Cubiscan 225-HS to generate .bmp images to be pulled from the machine. The XY BMP option will generate an image with the length and width, and the XY&Z BMP option will generate two downloadable files of the images with a height dimension as well as the length and width.

Filter When the filter is enabled, the Cubiscan doesn't measure excess items (such as a bag containing the product) and targets the item meant to be measured. (See [page 30](#)).

The drop-down menu offers different modes for using the filter feature. The options are disabled, enabled, auto-off, and lock-on.

When Enabled is selected, a filter mode check box will be visible on the home screen, and the mode can be enabled or disabled from the home screen.

When Disabled is selected, the check box will not be visible on the home screen.

When Auto-Off is selected, the operator will need to manually select the check box for each measurement.

When Lock-On is selected, the check box will always be checked and the Cubiscan 225-HS will take measurements in filter mode until the mode option is changed.

When the filter feature is used, the Cubiscan 225-HS measures only the largest item that is on the platform (the item that takes up the most pixels.) Height is not taken into account. As shown below, it is ideal for items in clear plastic bags.

Apparel Method This drop-down menu offers different methods for measuring apparel.

- **Compress Hgt. (mm)** This method produces compressed height results when using a compression plate.
- **Average Hgt** Some items have uneven heights. This method enables you to obtain the average height of an item.
- **Average Len & Wid** Some items have overstated lengths and widths. This method enables you to obtain the average dimensions of an item that may not have straight edges.
- **Compress Hgt, Average Len & Wid** When using this method with a compression plate, the results will show the compressed height, and the average length and width of an item that may not have straight edges.
- **Average Hgt, Len & Wid** This option is ideal to obtain realistic dimensions for apparel and other flexible objects without the use of a compression plate. The results will display the average height, length and width of an item.

Apparel Mode This drop-down menu offers different modes for using the apparel method feature. The options are disabled, enabled, auto-off, and lock on.

When **Enabled** is selected, an apparel mode check box will be visible on the home screen.

When **Disabled** is selected, the check box will not be visible on the home screen.

When **Auto-Off** is selected, the operator will need to manually select the check box for each apparel measurement.

When **Lock-On** is selected, the check box will always be checked and the Cubiscan 225-HS will take measurements in apparel mode until the mode option is changed.

Scale This drop-down menu is where you can select the scale model you are using in coordination with the Cubiscan 225-HS. The models which the Cubiscan 225-HS supports are listed below.

FW-150
FB Ultegra USB
MyWeigh HD150
FB22250 Auto
MT IND-231
Ishida IWX-D
Ishida IGX
CAS PB-150
DWP-440

Belt Speed You can adjust the belt speed by using the up or down arrows.



Figure 21
Configure Units menu

Units

From this screen you can select **units** of measure. You can change the dimensional units to **in** (inch), **cm** (centimeter), or **mm** (millimeter) and the weight units to **lb** (pound) or **kg** (kilogram).

You can also give your Cubiscan 225-HS a unique **machine ID**.

This screen is also where you can change the **dimensional factor** values. Refer to the table below for the default values.

139	International:	inches, pounds (in lb)
166	Domestic:	inches, pounds (in lb)
306	International:	inches, kilograms (in kg)
366	Domestic:	inches, kilograms (in kg)
2278	International:	centimeters, pounds (cm lb)
2720	Domestic:	centimeters, pounds (cm lb)
5000	International:	centimeters, kilograms (cm kg)
6000	Domestic:	centimeters, kilograms (cm kg)

Home		Menu		ABOUT	CONFIGURE	CALIBRATE	DIAGNOSE	TEST
				☐ Enable DHCP		☒ Enable Ethernet		
				Used IP: 10.0.101.40		Static IP: 10.1.100.100		
				SubNet: 255.255.254.0		SubNet: 255.255.255.0		
				GateWy: 10.0.100.1		GateWy: 10.1.100.1		
				Socket Port: 01050		HTTP Port: 00080		
				Local Host-Name:				
				Data Format: XML				
				☐ Enable POST				
				HostName:				
				Post Port:				
Post IP:								
POST url:								
Height	Width	Speed.fpm						
		99.8						
		99.7						
Start/Stop		Clear		Operation	Units	Ethernet	Other	

Figure 22
Configure Ethernet menu

Ethernet

This screen displays Ethernet information and options.

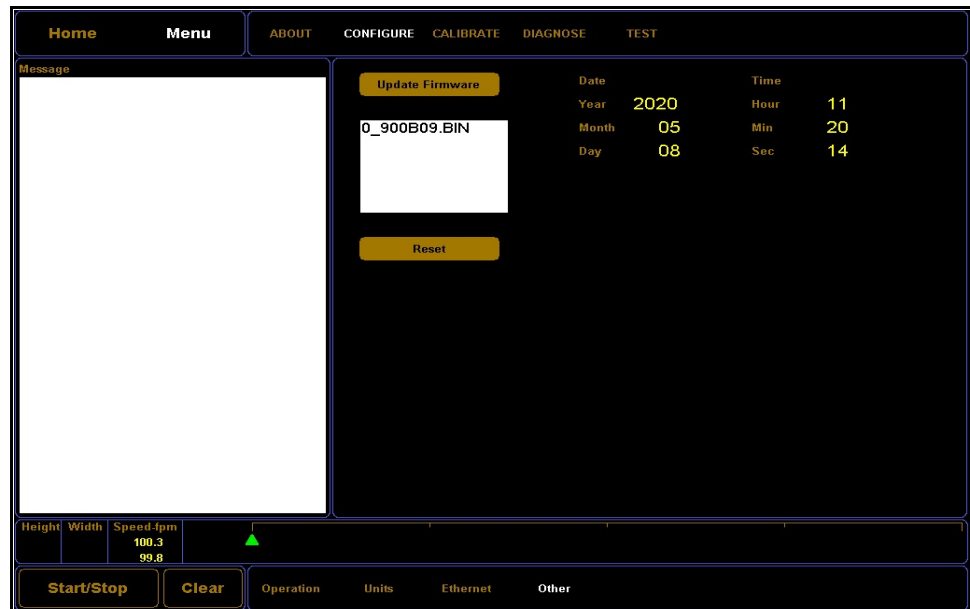


Figure 23
Configure Other menu

Other

On this screen you can set the **date** and **time**, **update firmware**, or **reset** the system.

Special Features

The following options are special features that the Cubiscan 225-HS offers.

Filter

The filter mode measures only the largest item (items cannot be touching), if multiple items are found in the measurement field. Items that have been excluded from the measurement process are displayed in red. The item that was measured is displayed in yellow (see Figure 24 below).

To turn filter mode off and on, go to the **Menu > Configure> Operation** screen (see Figure 24).



Figure 24
Filter mode

Smallest box

Smallest box mode is the default mode. This mode determines the smallest bounding box possible, and the placement of the item on the platform makes no difference. Turning off the smallest box mode measures items depending on their placement on the platform.

To turn smallest box mode off and on, go to the **Menu > Configure> Operation** screen.

The images shown below illustrate the difference between having the smallest box mode on or off.

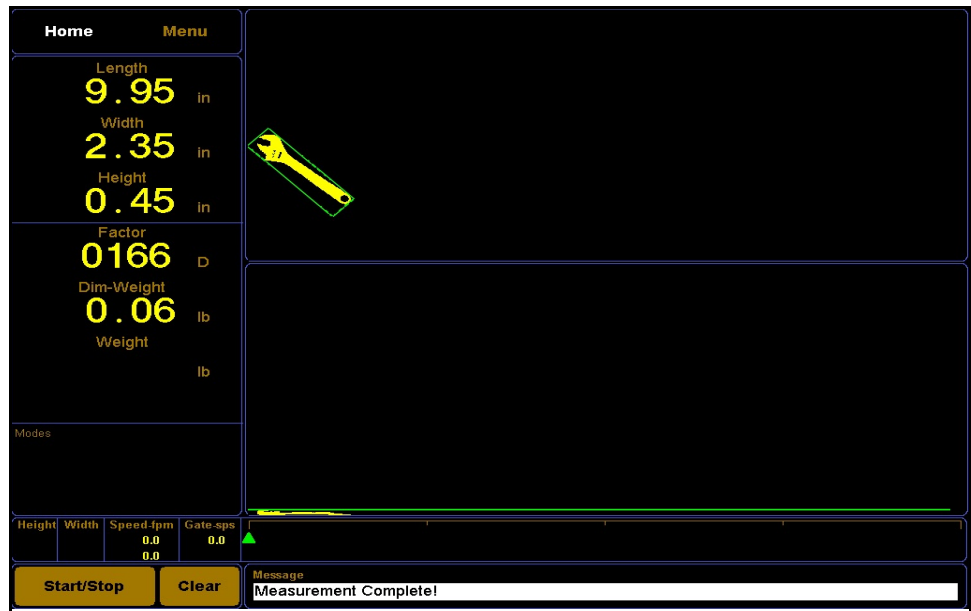


Figure 25
Smallest box mode on

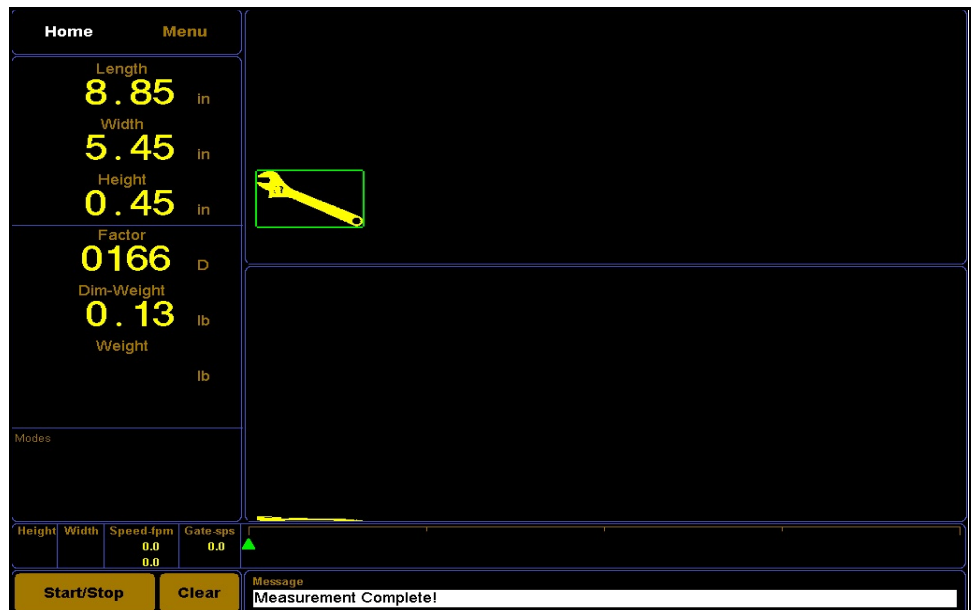


Figure 26
Smallest box mode off

Tray

The Tray mode is an optional feature that requires a standard clear acrylic tray (24 in x 18 in) that can be supplied by Cubiscan. This tray enables the Cubiscan 225-HS to measure very small items that would normally fall into the gap between conveyor belts.

When the Cubiscan 225-HS is in Tray mode, it automatically deducts the dimensions of the tray and displays the actual measurements of the small item that was measured.

The item that is being measured cannot exceed the tray's width or length.



Be sure that the handles of the tray go through the gate correctly. The tray should be placed so that one handle goes through the gate at a time. If both handles go through the gate simultaneously, the item in the tray may not be measured accurately.

To measure an item using the Tray mode, simply check the box labeled **Tray** on the **Home** screen in the modes area. You can also access this mode by tapping **Menu > Configure > Operation**, and checking the box on that screen.

Next, complete the following steps.

39. Tap **[Start/Stop]**.

40. Carefully place the tray on the conveyor belt.

41. Quickly and carefully place the item that is to be measured roughly in the center of the tray.

Your measurement results will be displayed on the touchscreen.

CHAPTER 5

CALIBRATION

This chapter provides instructions for calibrating the Cubiscan 225-HS gate and touchscreen. The Cubiscan 225-HS is calibrated at the factory; however, recalibration may occasionally be required.

Calibrate the gate if you suspect that the Cubiscan 225-HS is not measuring accurately, or if the calibration cube is not being measured correctly.

Calibrate the touchscreen if you have trouble making selections on the screen.

Gate calibration



The gate is calibrated automatically, and the following steps describe how to make necessary adjustments.

Height

Only adjust the height offset if your height measurements are inaccurate.

1. Tap **Menu** at the home screen.
2. Tap **[Calibrate]**.

3. Tap **[Gate]**. The gate calibration screen is displayed.



Figure 27
Gate calibration

4. Place the 12-inch high calibration cube vertically on the conveyor to be measured.
5. Tap **[Calibrate Height]**.

Length

Only calibrate the length if your length measurements are inaccurate.

1. On the Menu > Calibrate > Gate page, tap on the length value to adjust it to 60.00.
2. Start the conveyor. Tap **[Calibrate Length]**.
3. Measure a 60-inch long cube three or more times.

4. Tap [Calibrate Length].

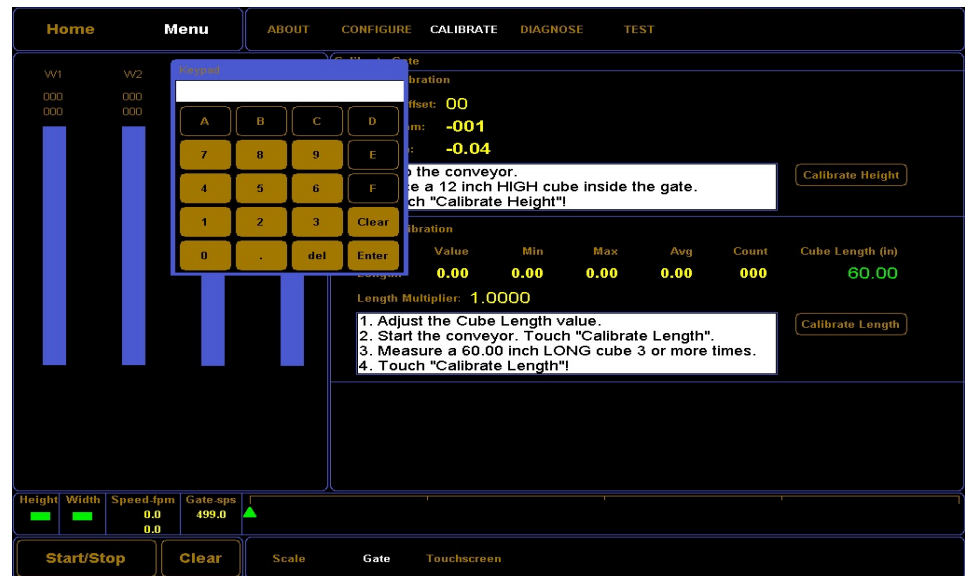


Figure 28
Calibrate Length

Touchscreen calibration

Take the following steps to calibrate the touchscreen.

1. Tap **Menu** at the main screen. The menu buttons are displayed.

2. Tap **Calibrate**. The calibration menu is displayed.



Figure 29
Calibration menu

3. Tap **Touchscreen**. The touchscreen calibration screen is displayed.

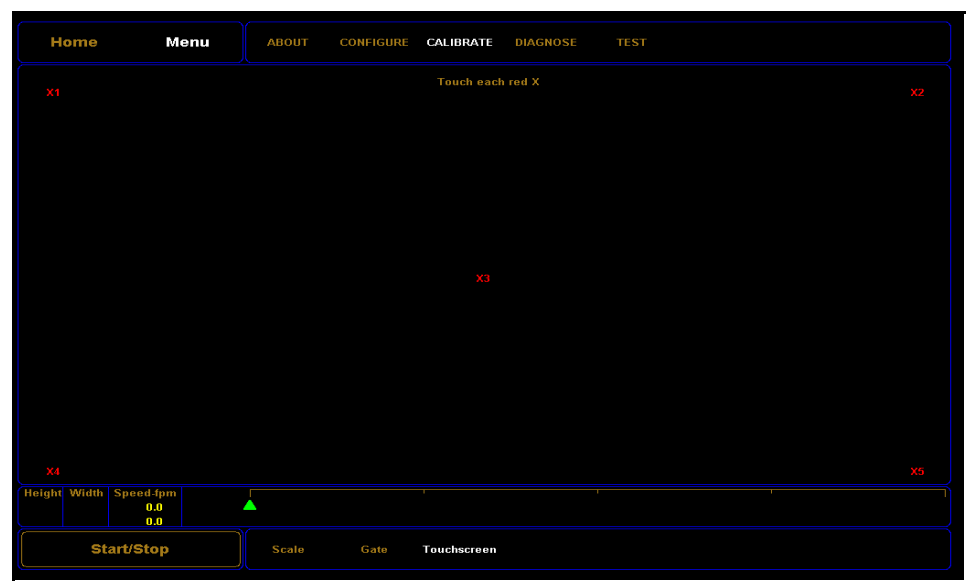


Figure 30
Touchscreen calibration

4. Touch the center of each **x** on the screen until the **x** turns green. There are five calibration points on the screen.

CHAPTER 6

MAINTENANCE

This chapter provides information on the maintenance and care of the Cubiscan 225-HS. Routine inspection and careful handling will help identify problems before they become serious and may prevent service calls or repairs.

Belt tension

To check or adjust your belt tension, complete the following steps.

1. Make sure that the Cubiscan 225-HS is turned off.
2. Remove the cover guards shown below by loosening the six Phillips screws on each cover panel and lifting the panel up and off.



Figure 31
Cover guards

3. Measure from the edge of the motor mounting bracket to the sliding bracket as shown below.



Figure 32
Tension measurement

4. The measurement should be approximately 3/8". If slightly different tension is needed due to belt stretch, it is okay to adjust the belt as needed being careful not to over-tighten it. The belt should be tensioned to the least amount of tension without the belt slipping on the drive motor.
5. This process will need to be repeated on the other side of the conveyor. The tension should be the same on both sides of the conveyor. This will prolong the life of your belt and bearings.

Cleaning the sensors

The gate sensors should be kept clean. While dust normally won't interfere with sensor operation, they should be cleaned routinely to prevent the possibility of interference. To clean, gently wipe the surface with a dry, microfiber cloth.

Cleaning the sensor guard



There is a plastic sensor guard located over the gate's bottom LED sensor strip. This guard is in place to prevent objects from falling onto the sensor strip and damaging it. If objects, debris, or dust are on this guard, it may cause interference in dimensioning objects.

To clean this guard, first make sure that the Cubiscan 225-HS is turned off. Carefully remove the guard by wiggling it free. You can then wipe it clean with a soft, dry cloth. Carefully replace the guard and make sure it is in place before starting the Cubiscan 225-HS.

If you do not want to remove the guard, use a feather duster to clean it.

NOTE

Do not operate the Cubiscan 225-HS without the sensor guard in place. When the sensor guard is not in place debris and dust fall directly onto the bottom sensor strip and are much more difficult to remove.

CHAPTER 7

TROUBLESHOOTING

This chapter provides assistance in identifying and solving common problems with the Cubiscan 225-HS. If you encounter problems not covered in this chapter, contact Cubiscan Service and Support at 801.451.7000 or your system integrator for assistance.

No response when you turn power on



If there is no response when you power on the Cubiscan 225-HS, do the following:

1. Verify that the AC power source is working properly.
2. Was the circuit broken? Check the circuit breaker located near the OFF/ON switch. Push the **10** button back in if it has popped out.

Contact Cubiscan if you require additional help.

Dimension readings are not accurate



If you suspect that the Cubiscan 225-HS dimension readings are inaccurate, do the following:

1. Check the gate sensors and the sensor guard for dust or debris. Clean the sensors and sensor guard with a dry, microfiber cloth.
2. Verify that the image is representative of the measured item. If not, check gate diagnostics of the Cubiscan 225-HS. Refer to "Diagnostics" on page 42 for further information.
3. Is there a correct amount of tension on the belts? Refer to "Belt tension" on page 38 for further information.

Computer error messages



The following error messages generated by Qbit indicate a communications problem between the Cubiscan 225-HS and the computer.

**No
Communications
with Cubiscan
225-HS**

This message indicates that no communication is taking place between the computer and the Cubiscan 225-HS.

**Transmission
Error**

This message indicates that erroneous or garbled data is being sent from the Cubiscan 225-HS.

If you receive one of these messages, verify the following.

1. Is the Cubiscan 225-HS turned on and securely connected to power?
2. Is the serial cable or Ethernet cable connected to both the Cubiscan 225-HS and the computer or network, and are both connections secure?
3. (Computer connection) Is the serial cable connected to the computer at either the COM1 or COM2 port?
4. (Computer connection) Is the Com Port in the Options dialog box (Tools menu) configured for the correct port?
5. (Network connection) Is the Cubiscan 225-HS properly configured to the TCP/IP communication? (Qbit software can be used to configure the Cubiscan 225-HS.)
6. Is there a problem with the Cubiscan 225-HS? Perform the Status function in Qbit to check the status of the Cubiscan 225-HS.
7. Is there a problem with the computer or network? Refer to your computer manual for information on troubleshooting the computer, or contact your network administrator.

Diagnostics



This section describes the diagnostic capabilities of the Cubiscan 225-HS.

Tap **Menu** > **Diagnose** at the home screen. The scale diagnostics screen is displayed (See Figure 33). Tap the additional sub-menus at the bottom of the screen to view diagnostic information for the gate, touchscreen, and encoder.

Scale



Figure 33
 Scale diagnostics screen

Gate



Figure 34
Diagnose gate screen 1 of 3



Figure 35
Diagnose gate screen 2 of 3



Figure 36
Diagnose gate screen 3 of 3

Touchscreen



Figure 37
 Diagnose touchscreen screen

Encoder



Figure 38
 Diagnose encoder screen

APPENDIX A

PARTS LIST

Following is a list of parts that can be purchased for the Cubiscan 225-HS as spare parts or if replacement is necessary.

Part No.	Description	Quantity
14262	On/Off Switch Assembly	1
13210	PCB Assembly, Mother Board	1
14350	Relays (TE Connectivity, KUP-11d15-5)	2
13218	AC/DC Power Supply Single-Out 12 V 8.33A 150 W	1
13764	DC Motor Controller	1
13866	Window, Dust Cover	1
14251	Roller 1.9 OD x 33L 7/16 HEX	1
14253	Roller 2.5 OD x 26L 11/16 HEX	1
14254	Roller 4 OD x 27L 11/16 HEX Flat	1
14255	Drive Roller 4.5 OD x 27L	1
14285	Bearing, 0.75ID Flange Mount	2
14244	Conveyor Belt 24W x 132L	2
14283	Timing Belt, 1" W x 33" L H Series	2
14257	L Encoder TR1 Mounting Bracket	1
14258	Trutrac-TR1 Encoder Assembly	1
14210	Nose Roller Assembly	2
14248	Bision 480DC Parallel Shaft DC Motor	1
10273	Calibration Cube, 12" x 5" x 3.6", Black	1
13411	USB to Ethernet Adapter	1
13413	Ethernet Cable, 10 ft	1
14510	Acrylic Tray (24" x 18") (Optional)	1
14437	User Manual (PDF)	1