


CUBISCAN 225-HS OPERATION

QUICK REFERENCE GUIDE

This quick reference guide provides an overview and instructions for operating the Cubiscan 225-HS.

For more detailed instructions, see the *Cubiscan 225-HS Operations and Technical Manual*.

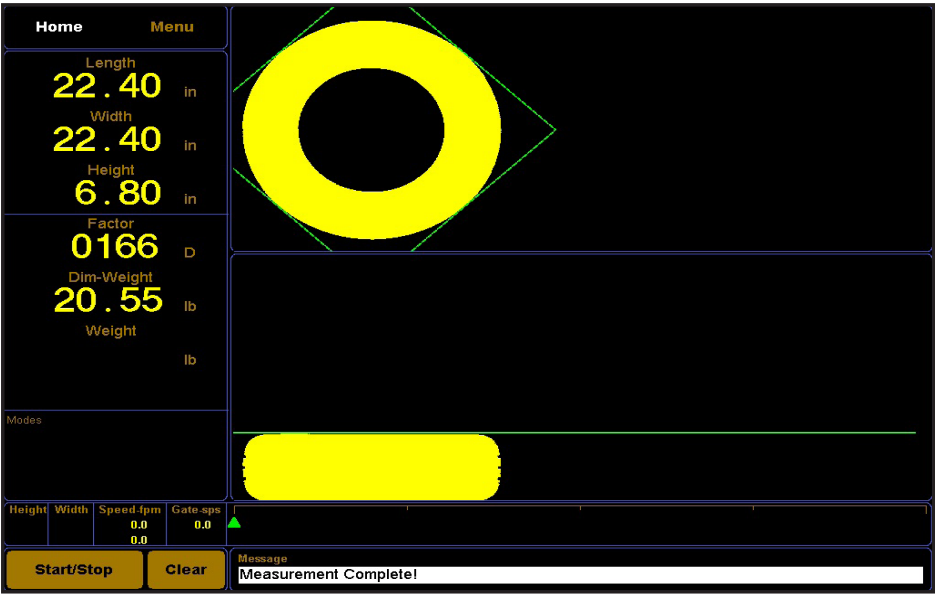

Touchscreen Overview

Buttons/Indicators	Meaning
Menu	Select configuration or calibration functions.
Start/Stop	Begin or stop measurement.
Clear	Clear the screen of previous measurement data.
L, W, H	These display the measured dimensions in inches or centimeters.
Weight	If an external scale is attached, this displays the measured weight in pounds (lb) or kilograms (kg) as selected.
DimWeight	This displays the dimensional weight in pounds (lb) or kilograms (kg) as selected.
Factor	This displays the dimensional factor currently being used to calculate dimensional weight.
Barcode	This displays an item's barcode.
Speed-fpm	This displays the belt speed.

Indicator light

The indicator light located at the top of the measurement gate displays the Cubiscan 225-HS's current status according to color.

Green: This means that the Cubiscan 225-HS is ready to measure.

Red: This means that the Cubiscan 225-HS has experienced an emergency stop or other failure.

No light: This means that the Cubiscan 225-HS is not ready to measure. There may be an object in the measurement field or there is LED blockage.

Measuring items

- 1 ➤ Make sure that the conveyor belt is free of objects.
- 2 ➤ Tap [Start/Stop]. The conveyor belt will begin moving.
- 3 ➤ Place an item on the conveyor belt.

After the item passes through the measurement gate, the measurement results will be displayed on the touchscreen.

The XY view (top-down view) is shown on the upper left of the screen. The Z view (side view) is displayed on the lower left of the screen. The green cursor follows a measurement that is being taken.

The measurement results will be displayed until the Cubiscan 225-HS measures another item, or you tap the **Clear** button.

